


EG4[®] WALLMOUNT INDOOR CONDUIT BOX

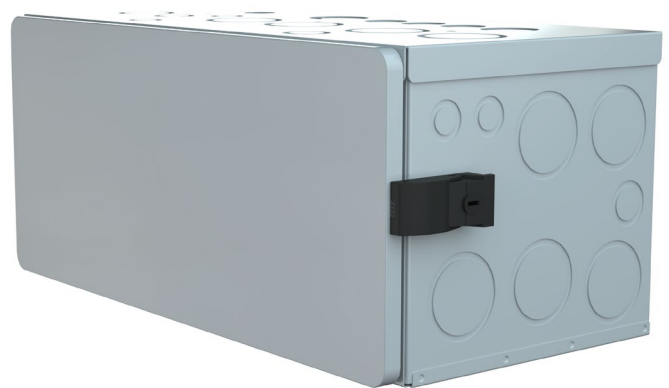

This guide will provide a brief overview of the installation steps as well as how the conduit box integrates with other products.

TABLE OF CONTENTS

1.	BRIEF DESCRIPTION.....	1
2.	PACKING LIST.....	1
3.	TOP PANEL KNOCKOUT PATTERN INFORMATION	1
4.	CONDUIT BOX KNOCKOUT/HOLE PATTERNS & SCHEMATICS	2
4.1	EXTERIOR DIMENSIONS.....	2
4.2	RIGHT & LEFT SIDE PANEL KNOCKOUT DIMENSIONS.....	3
4.3	TOP PANEL KNOCKOUT DIMENSIONS (FRONT SIDE).....	4
4.4	TOP PANEL HOLE DIMENSIONS (BACK SIDE)	5
5.	INSTALLING THE 280AH WALLMOUNT INDOOR BATTERY	6
5.1	BATTERY INSTALL WITH CONDUIT BOX.....	6
5.2	CONDUIT BOX INSTALL WITH BATTERY & EG4 INVERTER	7

1. BRIEF DESCRIPTION

The EG4® WallMount Indoor Conduit Box allows users a simple way to protect cables and connections between battery and inverter from the elements. The conduit box is designed to seamlessly integrate with the EG4 WallMount Indoor 280Ah Lithium Battery, as well as multiple inverters, including the EG4 18kPV Hybrid Inverter, EG4 12kPV Hybrid Inverter, and EG4 6000XP Off-Grid Inverter.




NOTE: This unit is **not** compatible with the 280Ah WallMount AW battery.

2. PACKING LIST


The items listed below will arrive with the product shipment:



WallMount Indoor
Conduit Box
Weight: 12.15 lbs. (5.52 kg)

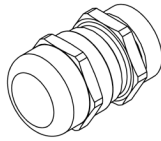

Cable Glands	
M63×1.5	Qty 10
M32×1.5	Qty 2
PG21	Qty 4

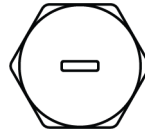

Knockout Plugs	
M63×1.5	Qty 4
M50×1.5	Qty 2
M40×1.5	Qty 2
G1	Qty 5
PG21	Qty 3



Grommets	
RSB-28	Qty 3
RSB-35	Qty 5
RSB-45	Qty 1
RSB-50	Qty 2
RSB-63	Qty 4



Keys




Side Screws

3. TOP PANEL KNOCKOUT PATTERN INFORMATION

The knockout/hole pattern on the top panel of the conduit box is designed to serve two different needs. The front set of knockouts (see image below) is designed for use with the EG4 18kPV and the EG4 12kPV inverters. The pattern and measurements make for a seamless integration with this unit. Alternately, the rear set of holes is designed for use with the 6000XP inverter (specifically the version of the 6000XP with the 6 knockouts pattern).




NOTE: If pairing the conduit box with an 18kPV or 12kPV inverter, the rear set of holes designed for use with the 6000XP inverter must be plugged using the included plugs.

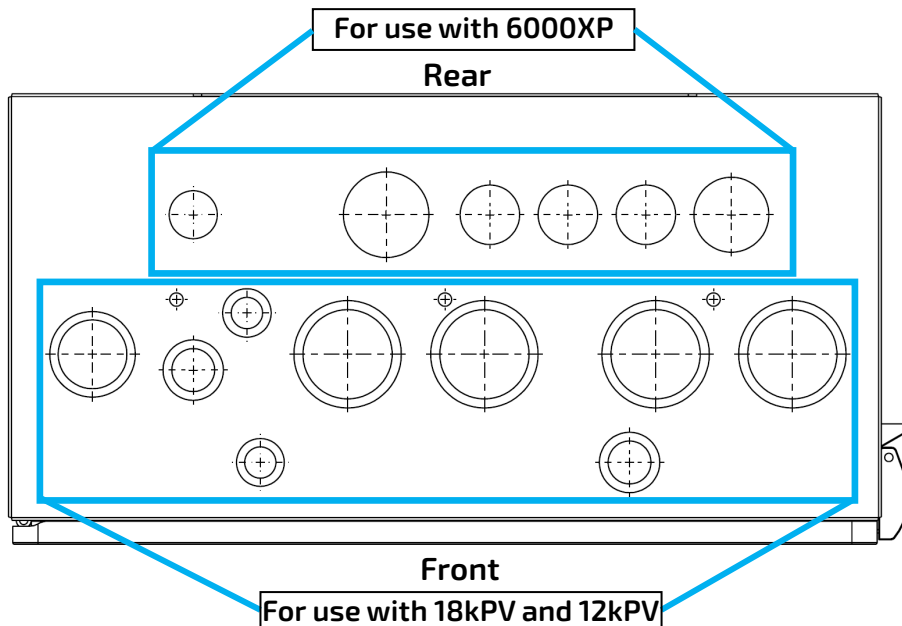


4. CONDUIT BOX KNOCKOUT/HOLE PATTERNS & SCHEMATICS

4.1 EXTERIOR DIMENSIONS

Top View

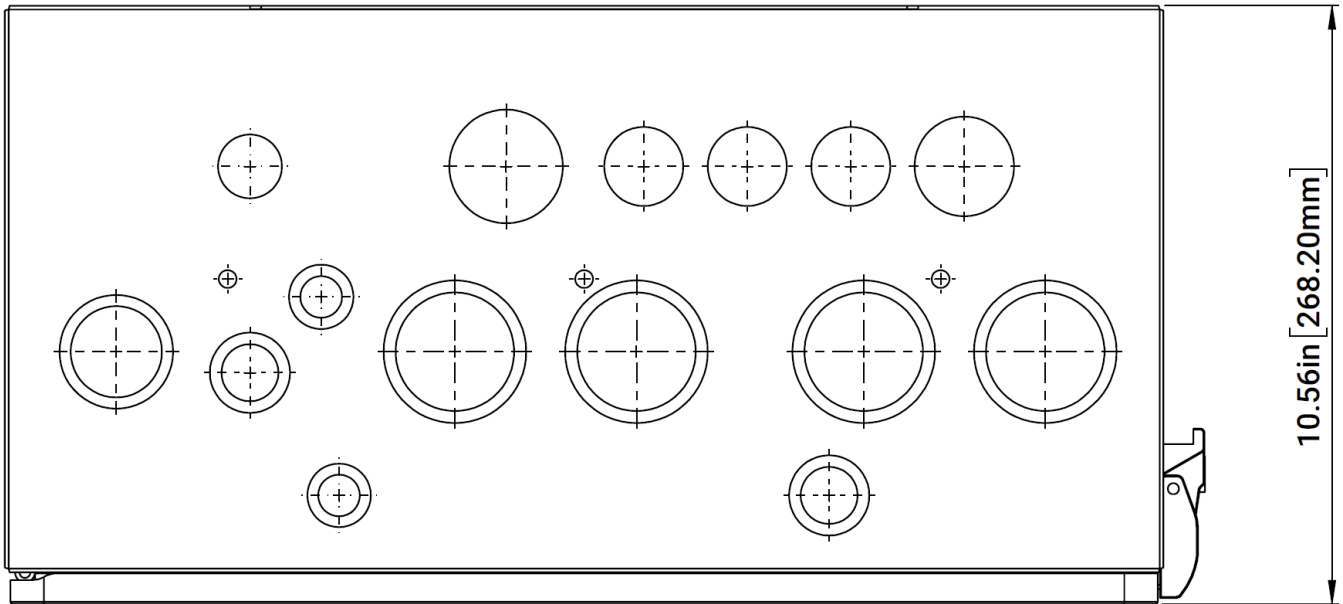


Front View

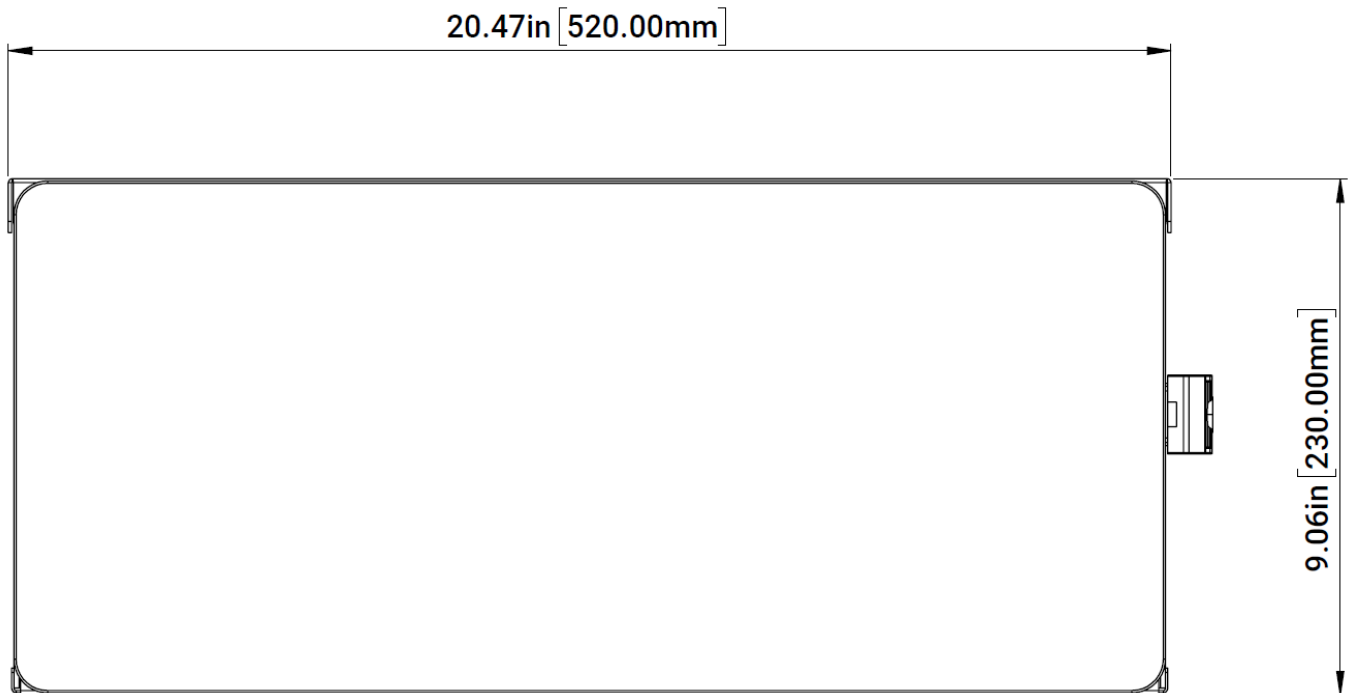


4.2 RIGHT & LEFT SIDE PANEL KNOCKOUT DIMENSIONS


Right Panel

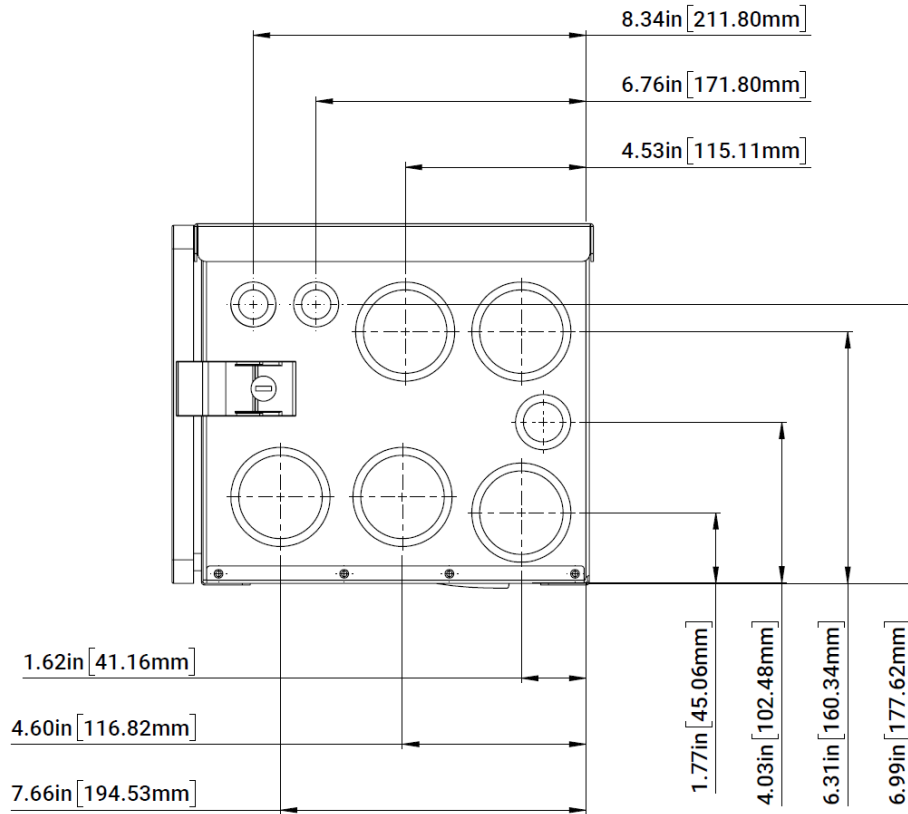



Left Panel

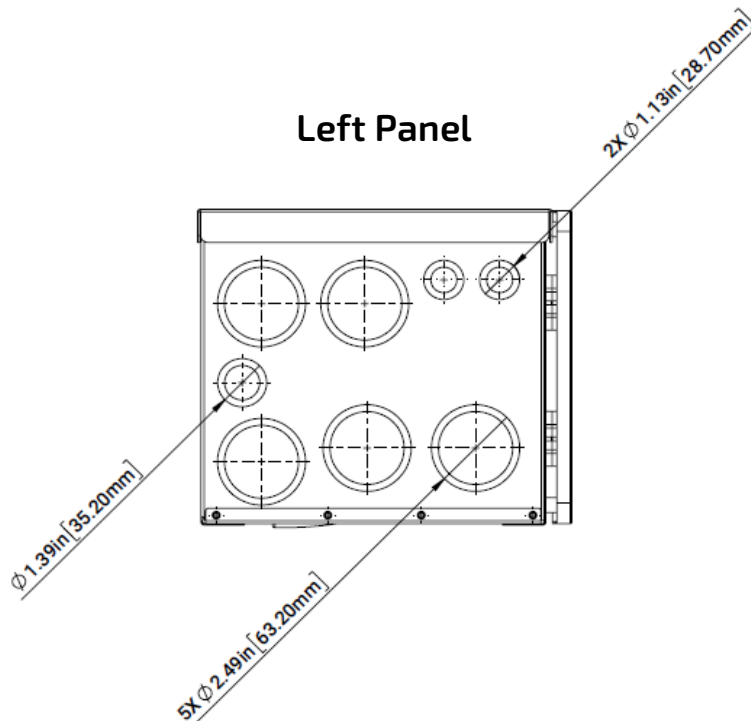

4.3 TOP PANEL KNOCKOUT DIMENSIONS (FRONT SIDE)

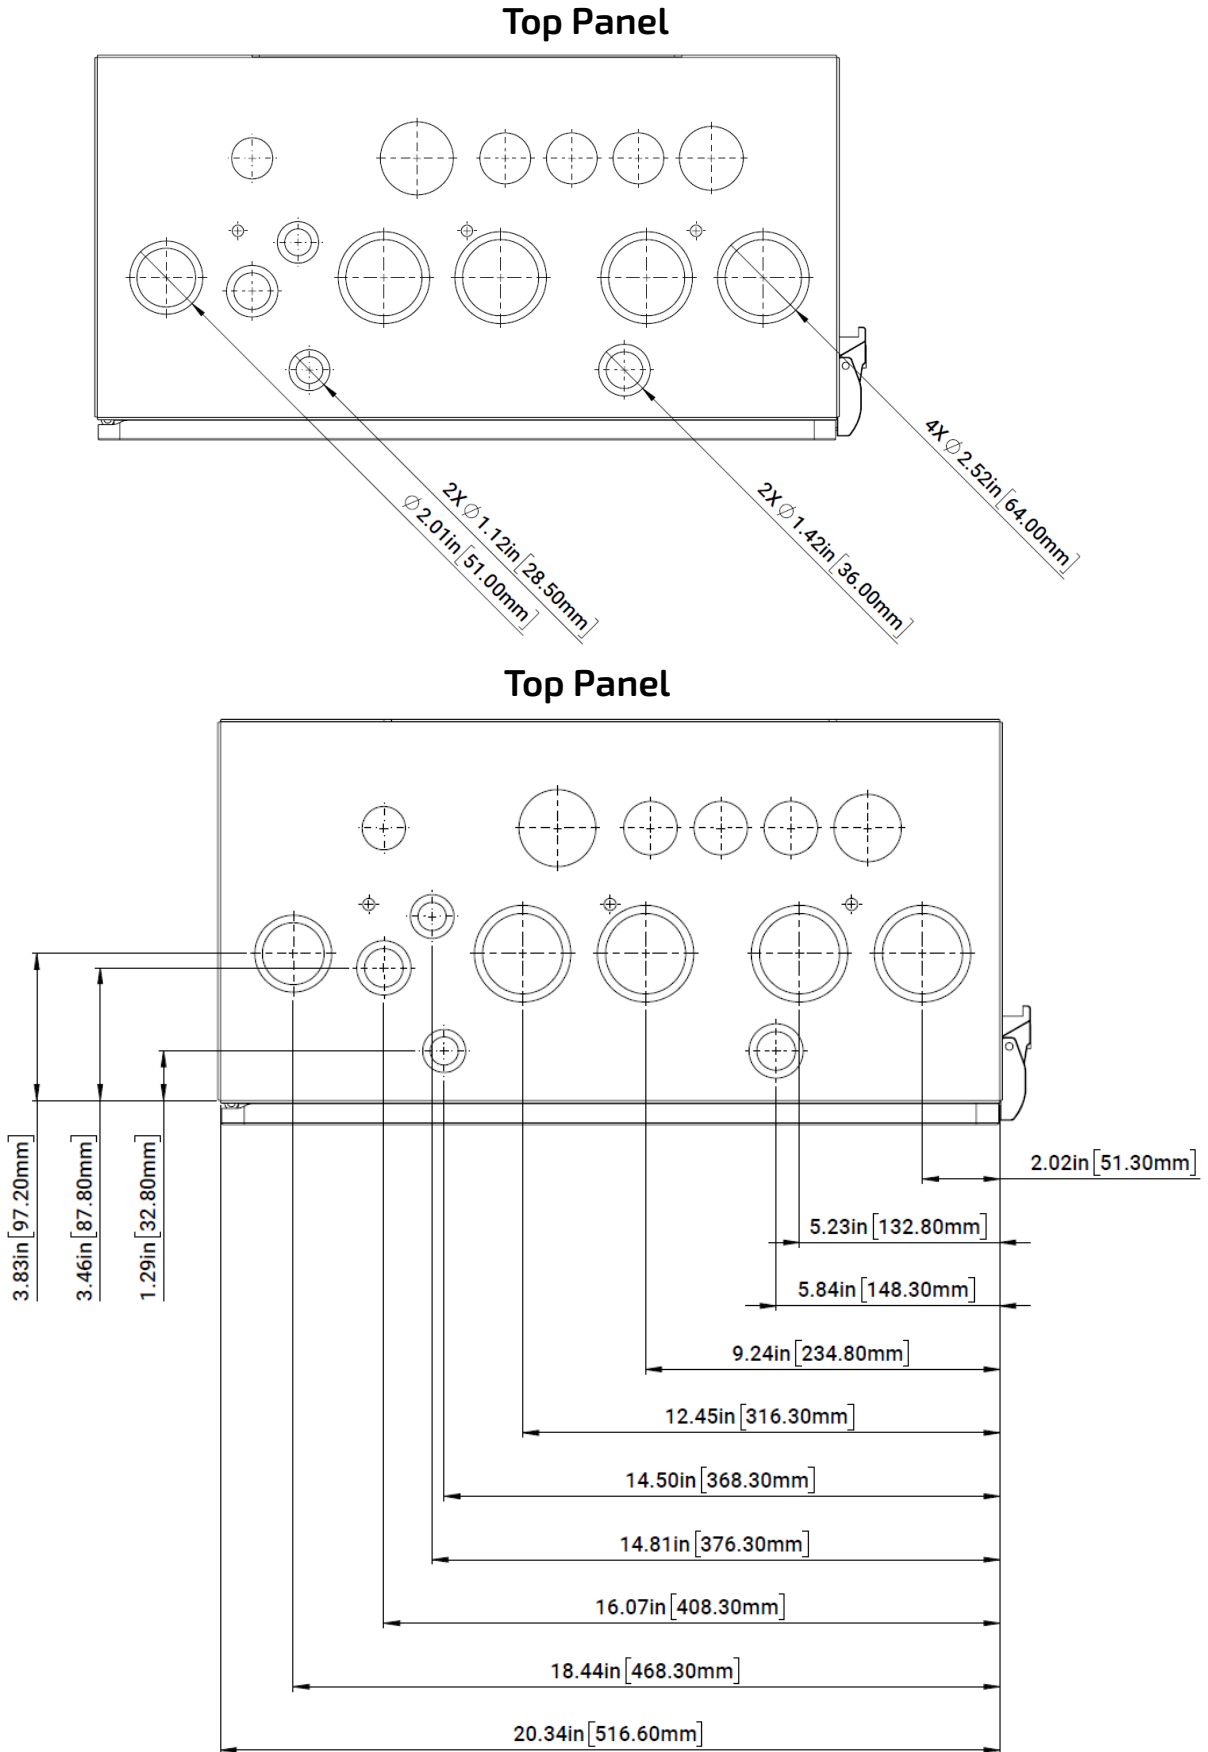

4.4 TOP PANEL HOLE DIMENSIONS (BACK SIDE)

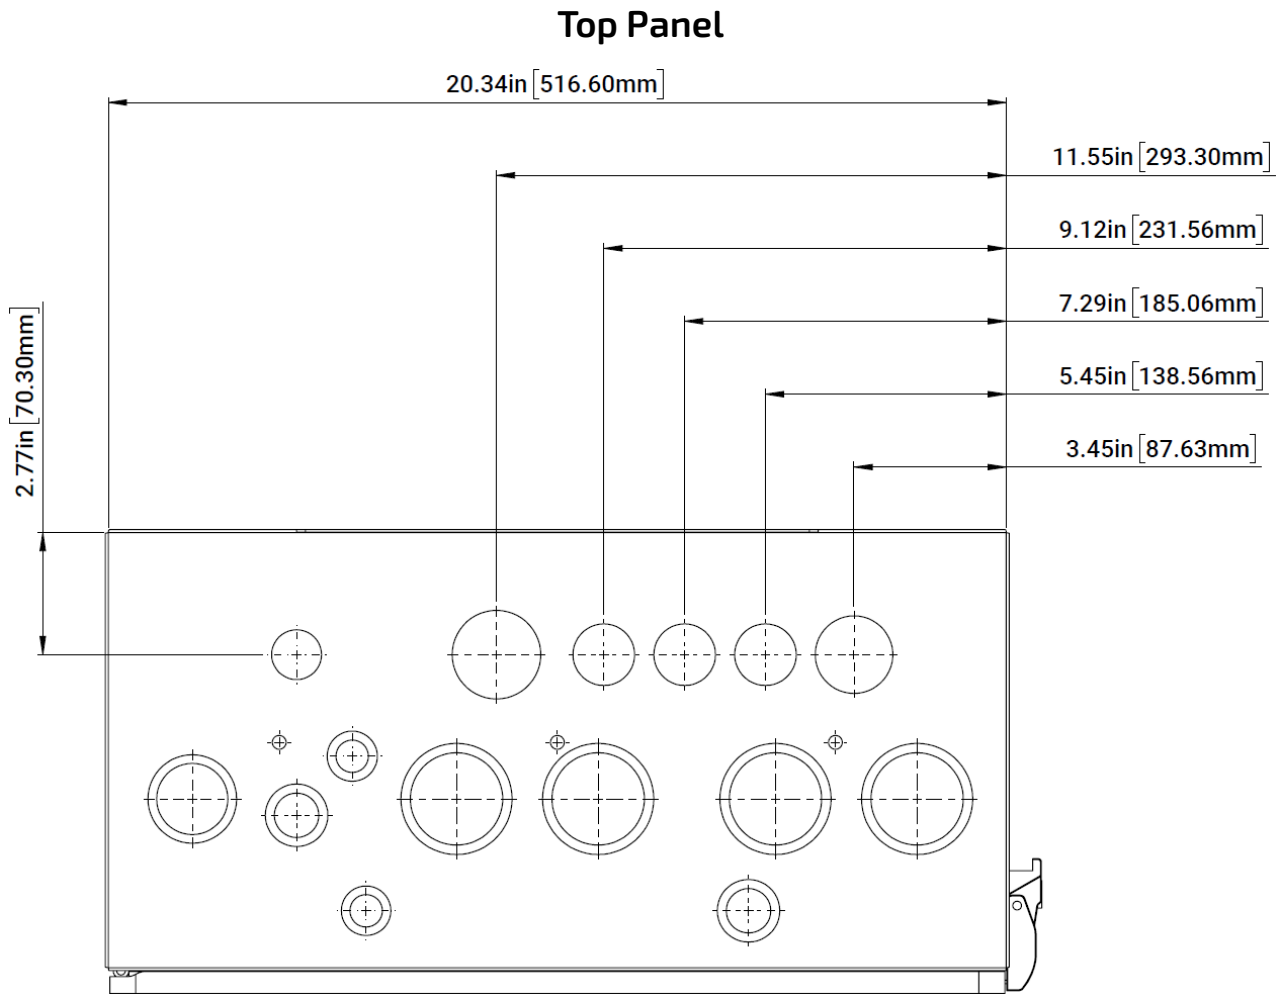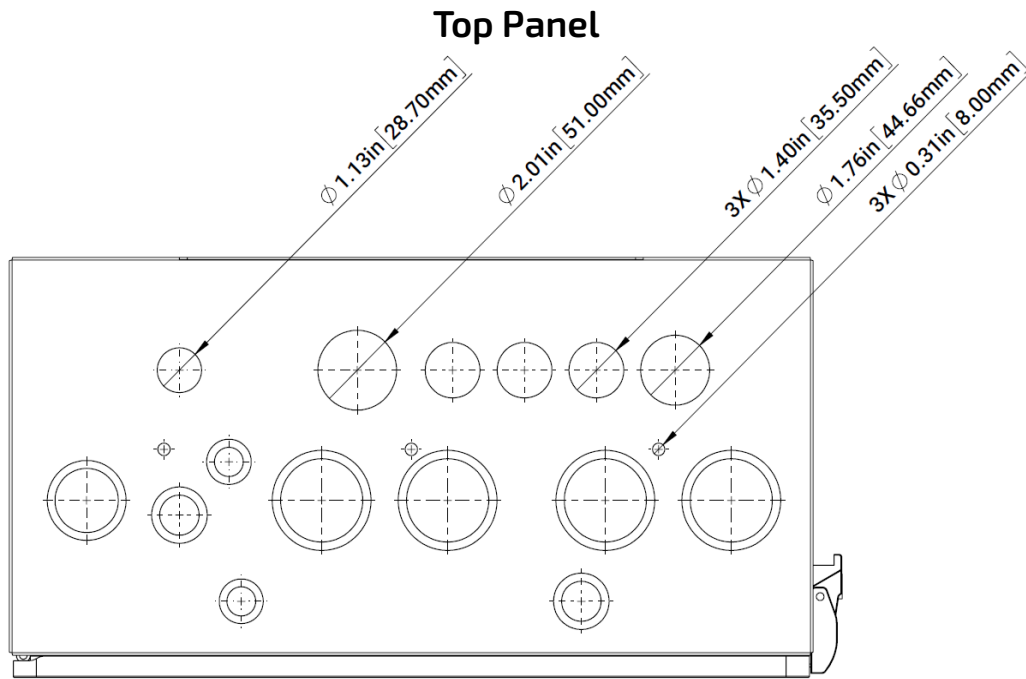

5. INSTALLING THE WALLMOUNT INDOOR 280Ah BATTERY

Follow the steps listed below to ensure the EG4® WallMount Indoor 280Ah Lithium Battery is mounted.



WARNING: Do not put EG4 WallMount batteries in series!

The BMS and internal components are not designed to handle this setup, which could cause the modules to fail, leading to damage.




NOTE: *The battery will be shipped with temporary lifting handles for removing the battery from its packaging. EG4 recommends these handles be removed before making any connections.*

correctly.

5.1 BATTERY INSTALL WITH CONDUIT BOX

1. Remove the 4 set screws holding the mounting bracket to the back of the battery pack and set them to the side.
2. Remove the mounting bracket from the battery.
3. Position the top of the mounting bracket on the wall at the desired mounting height, with a minimum clearance from the ground of 29.2 in. (742 mm).
4. Using a level, ensure the bracket is level and drill 6 holes to accommodate the mounting hardware used.
5. Secure the mounting bracket to the wall using the included expansion bolts (concrete or brick walls) or appropriate hardware for the mounting surface.
6. Attach the battery to the mounting bracket. Using the team-lift technique, lift the battery and hook its back flange onto the front flange of the mounting bracket.
7. Secure the battery to the mounting bracket using the 4 included side screws.
8. Remove the four screws on the top of the battery as shown in Section 5.2 and retain them for use in Step 9.
9. Identify the four screws locations shown in Section 5.2 that line up with the thumb screws located in Step 8. Place the conduit box on top of the battery and use the thumb screws to attach the box to the top of the battery.
10. Finally, properly ground the battery, attaching a grounding conductor to the M6 grounding screw on top of the battery to the equipment grounding system. **DO NOT GROUND THE NEGATIVE BATTERY CABLE!**

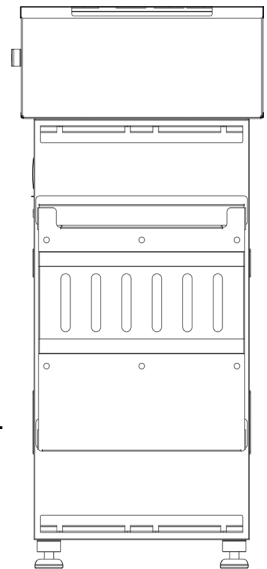

Rear View





NOTE: *If mounting the bracket at 29.2 in. (742 mm) from the ground, the battery will rest on the ground.*

5.2 CONDUIT BOX INSTALL WITH BATTERY & EG4 INVERTER



The EG4® WallMount Indoor 280Ah Lithium Battery is designed to integrate with the EG4 18kPV Hybrid Inverter, EG4 12kPV Hybrid Inverter, or the EG4 6000XP Off-Grid Inverter.

Follow the steps listed below to ensure proper connections are made in the system:


1. Remove the 4 set screws holding the mounting bracket to the back of the battery pack and set them to the side.
2. Remove the mounting bracket from the battery.
3. Position the top of the mounting bracket on the wall at the desired mounting height, with a minimum clearance from the ground of 29.2 in. (742 mm).
4. Using a level, ensure the bracket is level and drill 6 holes to accommodate the mounting hardware used.
5. If using a 18kPV, align the provided X-bracket with the holes on the mounting bracket and secure both to the wall, using the included expansion bolts (concrete/brick walls) or appropriate hardware required for the mounting surface. The X-bracket should sit at a 39.46° angle from the center. The X-bracket will rest behind the mounting plate, against the wall.
6. If using a 12kPV, the X-bracket should sit at a 41.42° angle from the center.

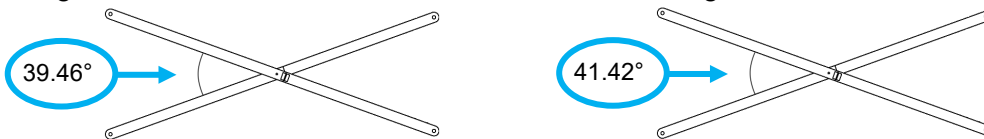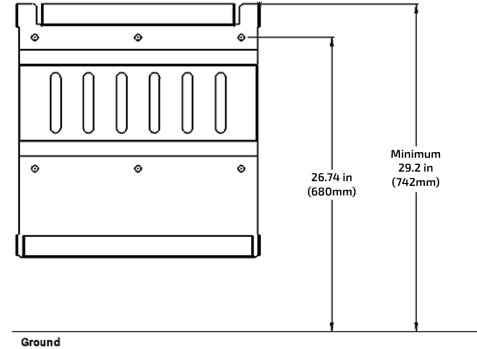

7. Remove the four screws on the top of the battery as shown below and retain them for use in Step 7. See the below image for reference.
8. Identify the four screws locations shown below that line up with the thumb screws located in Step 6. Place the conduit box on top of the battery and use the thumb screws to attach the box to the top of the battery. See the below image for reference.
9. Attach the inverter to the inverter mounting bracket and ensure the inverter's bottom knockouts align with the conduit box. If using a 6000XP, it will not have a mounting bracket of its own. It has two mounting ears which are already attached (one on top and one on bottom), each with 3 screw holes, that are used to mount the unit to the wall. The bottom mounting ear will fit behind the conduit box once it is in place on the wall, and the 3 screw holes can be accessed from inside the conduit box.
10. Finally, properly ground the battery, attaching a grounding conductor to the M6 grounding screw on top of the battery to the equipment grounding system. **DO NOT GROUND THE NEGATIVE BATTERY CABLE!**

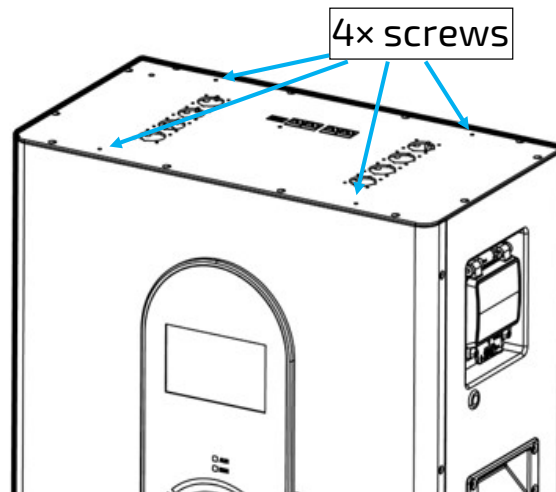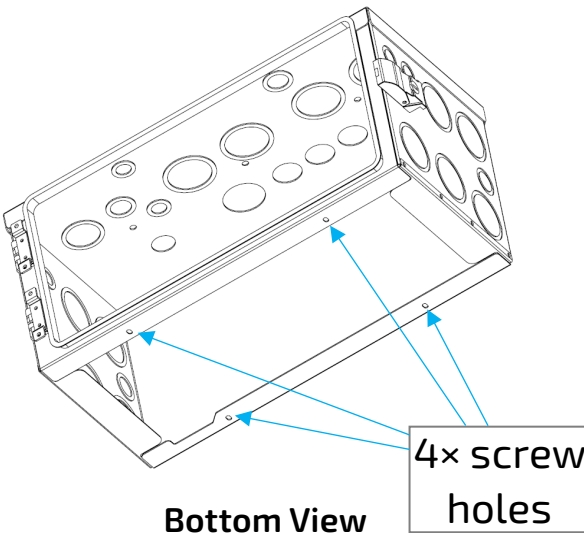

The image below represents a completed install showing a rear view.

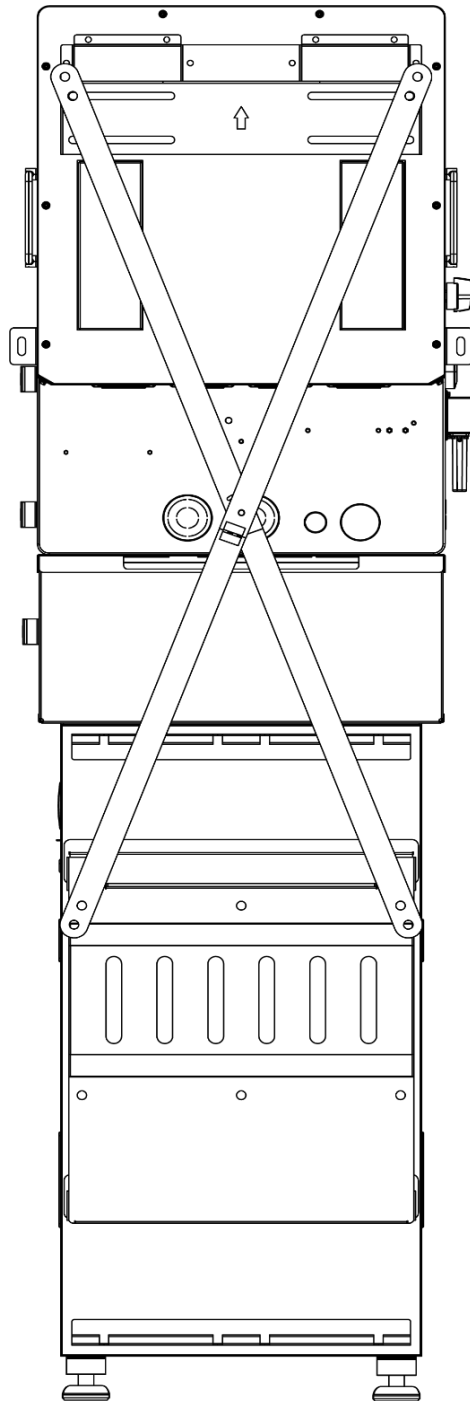

Rear View



CONTACT US

support@eg4electronics.com

(903) 609-1988

www.eg4electronics.com